

Serial Port Card Reader (iOS®)

From CHARGE Anywhere™s App:

- Plug in the card reader to the serial port on the phone

Press:

Press:

Press:

Press:

List of available peripherals will show.

(Serial Port iPhone 3)

(Serial Port iPhone 4/4S)

Press:

Press:

- Begin swiping cards.

Audio Jack Card Reader (iOS®)

From CHARGE Anywhere™s App:

- Plug in the card reader to the audio jack port on the phone

Press:

Press:

Press:

Press:

List of available peripherals will show.

(Audio Jack)

Press:

Press:

- Begin swiping cards.

Audio Jack Card Reader (Android™)

From CHARGE Anywhere™s App:

- Plug in the card reader to the audio jack port on the phone

Press:

Press:

Press:

Press:
(click to add/remove)

Press:

The application will then try and connect to the Audio Jack. When connected the Audio Jack will then display under the Select Swiper section.

- Begin swiping cards.

Audio Jack Card Reader (BlackBerry®)

From CHARGE Anywhere™s App:

- Plug in the card reader to the audio jack port on the phone

Press:

Press:

Press:

Press:

Connect Audio Jack Reader

Press:

The swiper will power up. Swipe Card and then select retrieve data. When prompted to allow the CHARGE Anywhere App to record media:

Press:

The card swipe data will then be verified. And a message will appear the UV250S swiper is successfully registered.

- Begin swiping cards.

TECHNICAL SUPPORT

Phone: 800-632-1888

Web: www.harbortouch.com

© 1999 - 2012 Harbortouch - Harbortouch™ is a registered trademark of United Bank Card, Inc. All Rights Reserved
 Harbortouch™ is a registered ISO/MSP of First National Bank of Omaha, 1620 Dodge St., Omaha, NE - Member FDIC
 © 2012 CHARGE Anywhere, LLC. All Rights Reserved. CHARGE Anywhere is a registered trademark of CHARGE Anywhere, LLC.
 iPhone is a trademark of Apple Inc., registered in the U.S. and other countries. The Bluetooth word mark and logo are registered trademarks and are owned by the Bluetooth SIG, Inc. Android is a trademark of Google Inc. Use of this trademark is subject to Google Permissions. Research in Motion, the RIM logo, BlackBerry, the BlackBerry logo and SureType are registered with the U.S. Patent and Trademark Office and may be pending or registered in other countries - these and other marks of Research in Motion Limited are used under license. iOS is a trademark or registered trademark of Cisco in the U.S. and other countries and is used under license.
 *Prices and terms subject to change without notice. Please verify with CHARGE Anywhere, LLC.



HARBORTOUCH

Quick Reference Guide Peripheral Devices



Powered by **CHARGE** ★ Anywhere®

Card Reader/Receipt Printer (Android™)

From the home screen on device:

In order to connect the Bluetooth® Card Reader / Receipt Printer to the Android™ device, make sure both devices are powered on.

Press: 

Press: 

Press: 

Press: 

Turn on Bluetooth®.

Press: 

Click on device and enter password. Default Password is either 1234 or 0000, unless marked otherwise (Located under paper lid of the Printer).

From CHARGE Anywhere®'s App:

Press: 

Press: 

Press: 

Under Printer, select “click to add/remove”, then select the appropriate printer that is displayed.

When prompted to also set the device as a swiper, select “yes”.

- Begin swiping cards.

Quick Tips:

Upon first use, remove the plastic protecting the battery, to ensure proper charging and powering of the device.

After the printer is paired, if the printer loses Bluetooth® connectivity, the easiest way to repair connection is the TRIPLE TAP. From the main screen of the App, tap the ★ 3 times.

Card Reader/Receipt Printer (iOS®)

From the home screen on device:

In order to connect the Bluetooth® Card Reader / Receipt Printer to the iOS® device, make sure both devices are powered on.

Press: 

Press: 

Turn on Bluetooth®:

Note: The phone will automatically scan to search for peripheral devices.

Click on device and enter password. Default Password is either 1234 or 0000, unless marked otherwise (Located under paper lid of the Printer).

Upon successful connection, phone will indicate “Connected” message.

From CHARGE Anywhere®'s App:


Press: 


Press: 

Press: 

Press: 

List of available peripherals will show.

Press: 

Press: 

Press: 

- Begin swiping cards.

SCAN ME!



Scan for peripheral compatibility list.

In some cases, certain mobile devices on this list may not function with Bluetooth® or audio jack peripherals due to device manufacturer hardware incompatibility. All mobile devices should be tested with the peripherals prior to deployment to ensure compatibility.

Card Reader/Receipt Printer (BlackBerry®)

From the home screen on device:

In order to connect the Bluetooth® Card Reader / Receipt Printer to the BlackBerry® device, make sure both devices are powered on.

Press: 

Press: 

NOTE: Press the menu button, and then select Enable Bluetooth® if it is not turned on.

The phone will scan for trusted devices and they will be listed in the window.

Press: 

Click on device and enter password. Default Password is either 1234 or 0000, unless marked otherwise (Located under paper lid of the Printer).

The card reader/receipt printer will display in the paired devices list.

Press: 


From CHARGE Anywhere®'s App:

Press: 

Press: 

Press: 

Choose paired device.

Press: 

- Begin swiping cards.